

Must read this before installation

Important instructions about your CISS system Artisan 800 810 835 837

1. If your printer is brand new you must first install the original cartridges that came with your printer. The reasons for this is because the printer needs to be tested and in working condition before installing ciss even new printers are sometimes defective right from the start.
2. After you remove original cartridges you can install CISS.
3. Please don't wait until your original cartridges are empty before installing CISS. In case CISS has a problem you still have your original cartridges to fall back on.
4. After installing CISS if there is something wrong or there is a printer error coming up- Please e-mail Devin **you must include your item number or the order number** and your name in the e-mail so that I know who you are.
5. Make sure to describe your printer error in detail and what you have tried so far to fix it. I will help you fix it or send replacement parts or a replacement unit.
6. Your CISS is equipped with ink levels reset chips. Ink levels can be reset when you receive an error on the printer screen "can not recognize cartridges". When that happens, open your printer and lift all 6 cartridges out of the printer about 1/2 inch. Then push them back down until you hear a click. Then close the printer and the printer will begin charging ink and levels should be back to full.

Thank you,

Warning!

Please keep ink tanks on the same level as the printer. (on the same desk bottom of printer = bottom of ink tanks)

DO NOT put ink tanks above the printer or on top of the printer. Air Filters must be installed on to ink reservoirs outside the printer. Do not put air filters inside the printer

Do not mix ink from different manufactures. Mixing ink may cause ink to clog in the ciss or even worse in your printer.

www.SuperPremiumElectronics.com

Installation Procedure

Step 1: Preparation



Put the CISS on the Left side of the printer. and place all the tubes at correct position.



Pull out the small rubber plug from the air hole as picture shown above. For all 6 colors



Place 6pcs of air filters into air holes, For all 6 colors. With the fat side down


Step 2: Install Cartridges



Insert the CISS cartridge in the same way as above picture shown


Press the cartridges to make sure they are well installed. If you installed them correctly you will hear a "click"

Step 3: Printer Adjustment

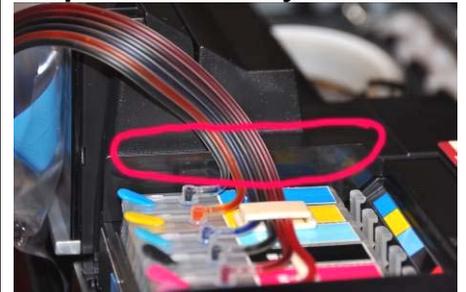

The black bar inside the printer will have to be modified to accommodate the CISS

Step 4: Using Pliers

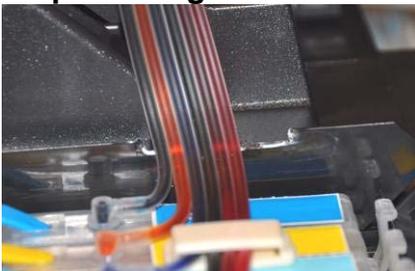

Directly behind ink line you will need to remove a portion of the black bar. Use pliers grab and twist and it will come right off.



This will allow for the ink to flow freely into your printer. 1) This printer will not work if the lid is open even just an inch. 2) The ink lines will get pinched preventing ink from flowing into your printer.



Step 5: Final Step



You are almost done! Make sure there are no sharp edges in the plastic that will cut the ink line. Push printer lid carefully down until printer says that it is down.

We have included an optional piece with the syringes. There is a black clip with plastic on it, you can peel this off and stick it to the right side of your printer. Place the ink lines in the middle and clip the top piece into place, this will keep the lines off to the side. This is completely optional your printer will run perfectly whether you decide to use the clip or not.

Step 6: Check the nozzle

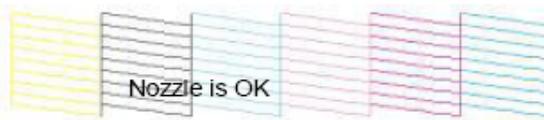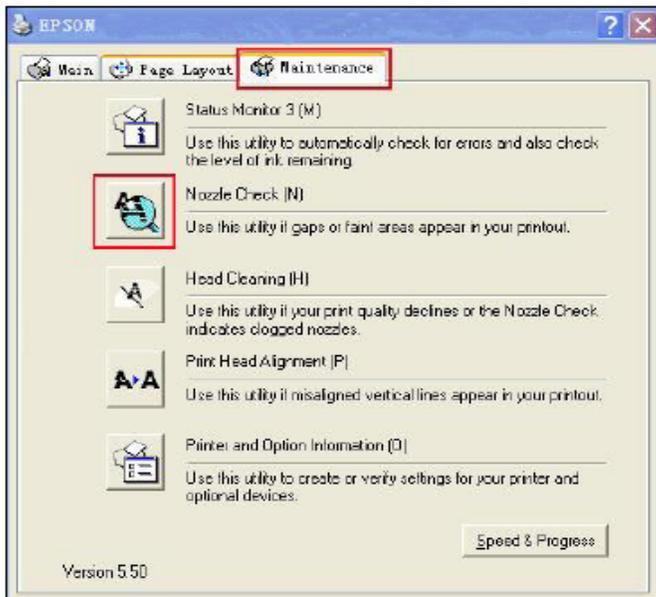

Print test lines. If it is OK, then you can begin using.



If there is broken lines, then pls clean the printer head.

Enter Checking Nozzle Panel


If you have broken lines on the nozzle check run a head cleaning. Then let your printer sit 2-3 hours then run another nozzle check. If you still see broken lines then do another head cleaning and let it sit 3-4 hours, then print a nozzle check. Sometimes it takes 3-4 head cleanings. Do not run more than 3 head cleanings in a row. Let your printer sit awhile after each head cleaning. Letting the printer sit will help to clear up any printing problems.

Chip Reset



Lift the cartridges up 1 inch, press them back in again. Close lid and the chips will reset the ink level

Refill Ink

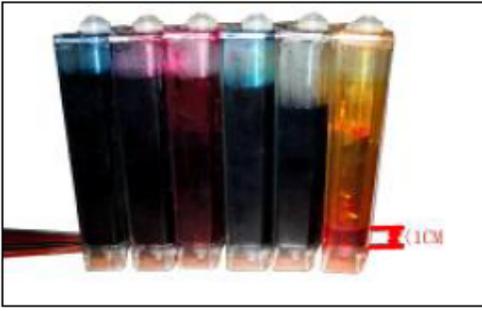

Please pay attention to the ink level in the reservoirs; if the ink level is below 1CM as the picture shown above, please use refill kits to fill ink into Reservoir bottles. Carefully pull out the rubber plugs from the ink refill holes (There is possibility of ink spattering. Please be careful.) Refill ink according to the colors. Then re-cap the rubber plug. (**Please keep the printer and the reservoir bottles at the same level while refilling ink.**)

Attention for Maintenance:

Take out the CISS including the inner cartridges and other components. Then remove support arm from the printer, and re-install original cartridges. Please inquire local dealer before sending to maintenance.

Notice:

1. Please don't take out the cartridges at random after installing the CIS system. Keep the reservoir bottles at the same level as the printer.
2. Try to keep at least 1/2 inch of ink in the reservoir.
3. **Please keep ink tanks on the same level as the printer. DO NOT put ink tanks above the printer or on top of the printer.**
4. Suggested using in a dry place between 60 and 95 degrees Fahrenheit. Avoid exposure to direct sunlight.
5. Don't reverse or lean the continuous ink supply systems during shipping. Please make sure all the ink filling holes and ventilation holes are closed tightly during transportation. Otherwise, the ink may leak.
6. Don't sway the cartridge frequently. It may cause ink leakage.
7. Don't pull out the connector of cartridge and don't tear off adhesive tape at the bottom of cartridge.

Warning:

1. Not drinkable; keep it out reach of children.
2. Avoid exposure to direct sunshine and don't keep it in high or freezing temperature.